

Setting up Remote Access for RF Lighting Control


NOTE: Set up remote access ONLY when you are home and your phone is connected to the same wireless network as your hub.

Create a remote access account.

1. Sign in to the Legrand Lighting Control app.

A prompt appears for remote access setup with three options:

- » **No Thanks** (exits the account setup)
- » **Yes** (sets up a remote account)
- » **Later** (sets the prompt appearance for the next time the app is open)

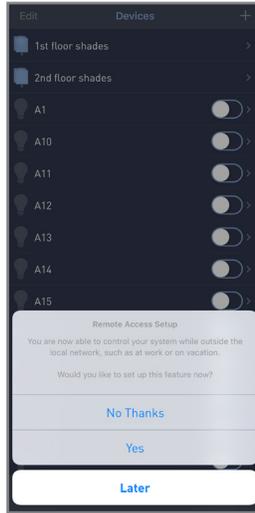


Select **Yes**.

NOTE: To open the Remote Access Setup prompt, go to **Settings > Remote Access Info > Remote Access Setup** in the Legrand Lighting Control app.


2. Tap



3. Sign in to an existing account or select **Sign up now** to create a new account.

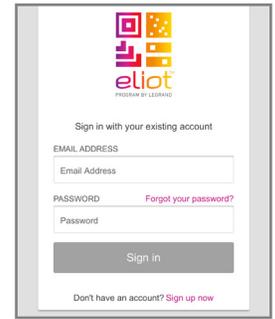


4. Request a verification code, then verify the code before moving forward. The verification code will be sent to the email address you provide.

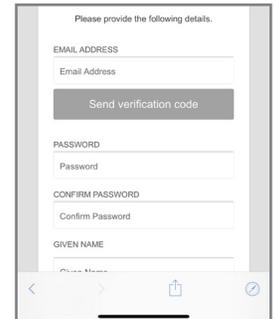

5. Once the code is verified, create a password and fill in the remainder of the profile.

6. Tap 

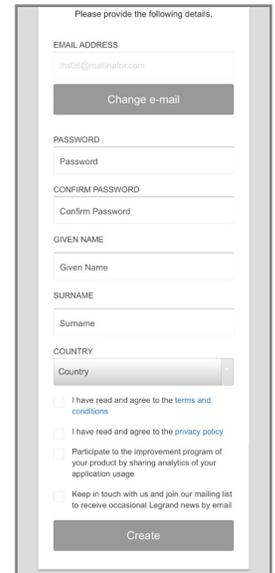

Your setup is complete. You will be redirected back to the app.

