## Tech Note: Reset Device Back To Factory Default

## Smart Lights Wi-Fi


A Remove from appusing trash bin




Press and Hold 10 seconds


Release...after about 10 -15 more seconds locator light will blink amber

## Plug In Switch

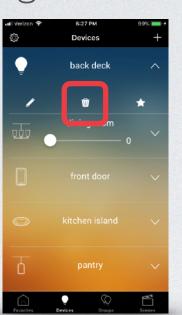

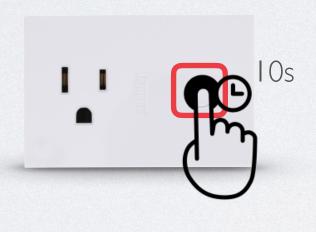


Device in "off" state

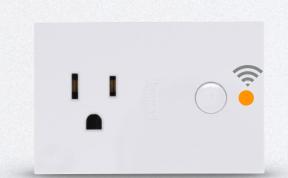


Plug In Dimmer




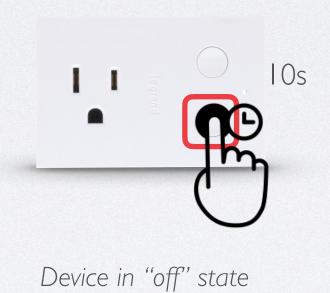



In Wall Switch

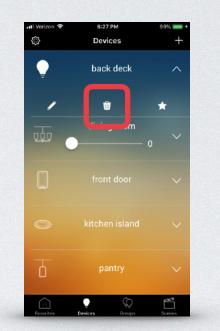


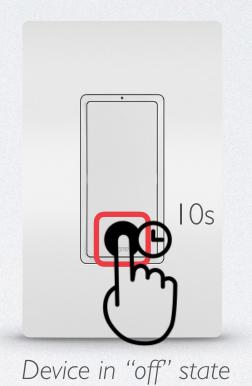



In Wall Dimmer



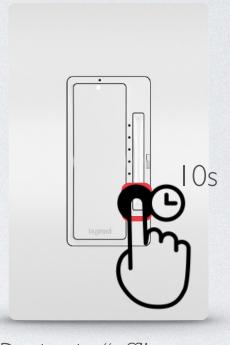

Device in "off" state

