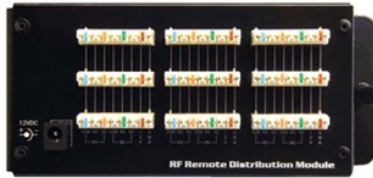

RF REMOTE DISTRIBUTION MODULE

364696-01 | [On-Q](#)



FEATURES & BENEFITS

As an optional companion interface RF Remote Control Receiver/Transmitter Combo (364697-01), the RF Remote Distribution Module provides access to all six RF remote receiver relay output terminals: Normally Open, Normally Closed and Common. It is located with the Home Lighting or HMS Controller.

Provides access to all six RF remote receiver relay output terminals:

SPECIFICATIONS

GENERAL INFO

Discontinued: Yes