



*DLM Occupancy Sensor

*NOTE:
 Corner mount Sensor shown with pigtail & supplied coupler. Ceiling mount Sensor has two RJ45 ports.

DEVICES ARE PRESET FOR PLUG n' GO™ OPERATION, ADJUSTMENT IS OPTIONAL.

Sequence of Operation: In this configuration The LMRC-102 defaults to multi-level automatic-on/automatic off. Load (a) turns on automatically and load (b) defaults to manual-on control; both loads turn automatically off. The LMRC-101 defaults to manual-on/automatic off. Maximum of 4 room controllers, controlling up to 8 loads and up to 24 communicating devices per DLM local network. For full operational details, adjustments and more features of the product, see the DLM System Installation Guide at www.wattstopper.com

WattStopper® 800-879-8585			
Title LMRC-101 & LMRC-102 Triple Relay Wiring Diagram			
Scale None	Drawing# 90-151	Date 10/14/10	Rev. 1