



WALKER® INFLOOR SYSTEMS

S20ADP1 and S20ADP2

Preset Adapter

INSTALLATION INSTRUCTIONS

Walker® electrical systems conform to and should be properly grounded in compliance with requirements of the current National Electrical Code or codes administered by local authorities.

All electrical products may present a possible shock or fire hazard if improperly installed or used. Walker electrical products may bear the mark as UL Listed and/or Classified and should be installed in conformance with current local and/or the National Electrical Code.

Products Covered: S20ADP1 and S20ADP2

1. Using a flathead screwdriver or chisel, remove all excess concrete from the bottom of the preset (see Figure 1).
2. Align adaptor with the top opening of the preset (see Figure 2).
3. Using a hammer and a screwdriver tap the adaptor until it sits flush with the bottom of the preset. **Do not trap ground wire below adaptor** (see Figure 3).
4. Place trim flange over adaptor and align the four mounting holes in the flange to the four tapped holes in the adaptor (see Figure 4).
5. Tighten flange to adaptor using a screwdriver. **Do not over tighten flange. Tighten until flange is snug to carpet or tile surface** (see Figure 5).

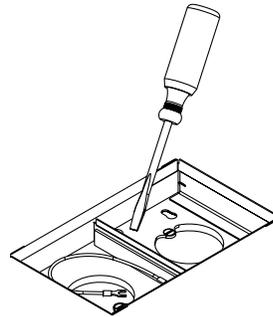


Figure 1

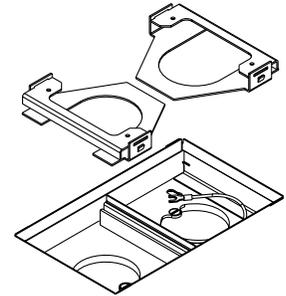


Figure 2

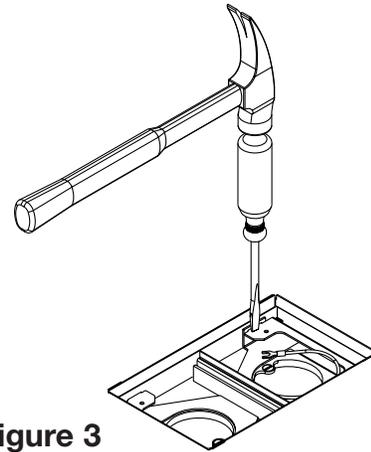


Figure 3

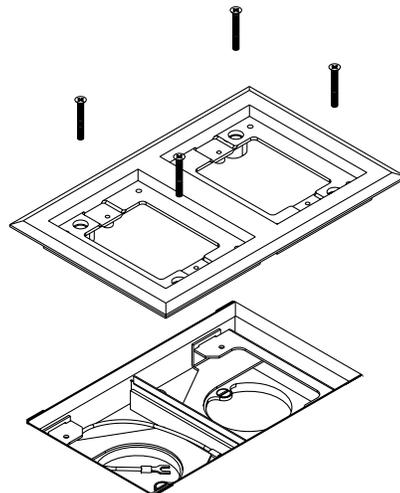


Figure 4

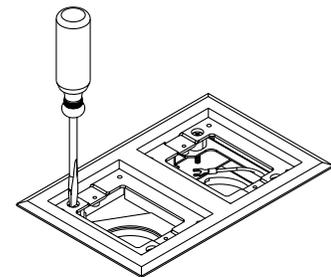


Figure 5

