

WIREMOLD



DS4000™ Elbow Fittings INSTALLATION INSTRUCTIONS

Installation Instruction No.: 43268 – January 2006


Wiremold / Legrand Electrical Systems conform to and should be installed and properly grounded in compliance with requirements of the current National Electrical Code, Canadian Electrical Code, or codes administered by local authorities.

All electrical products may represent possible shock or fire hazard if improperly installed or used. Wiremold electrical products are UL listed to U.S. and Canadian safety standards, made for interior use only, and should be installed in conformance with current local and/or the National Electrical Code.




Products Covered: DS4011, DS4017, DS4018


Step 1. Affix Fitting Base to mounting surface with minimum #8 screws. (not included)

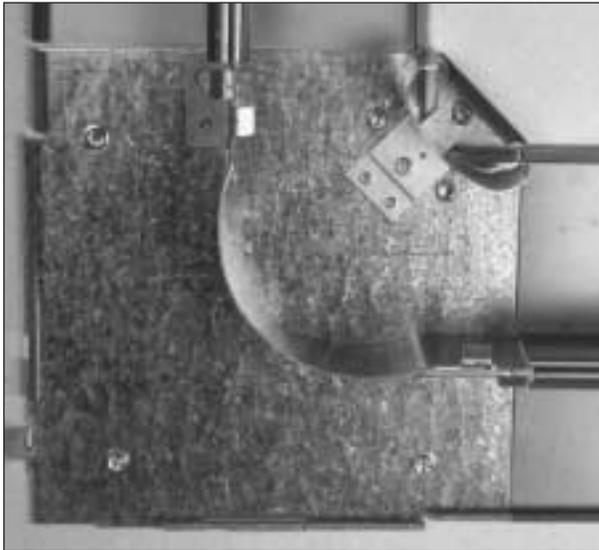


Step 2. Connect Raceway to Fitting with supplied Adjust-to-Fit™ Couplings.

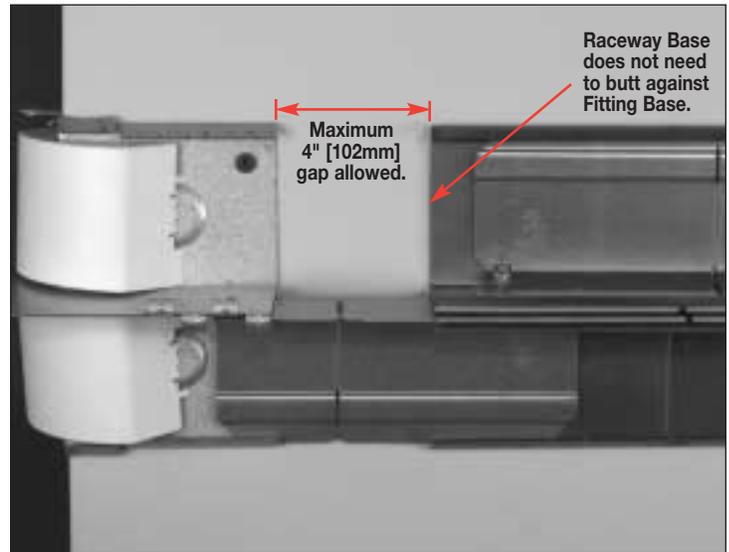

Step 3. All Fitting bases have similar features. **NOTE:** the Raceway Cover Stop and internal Snap Fingers.

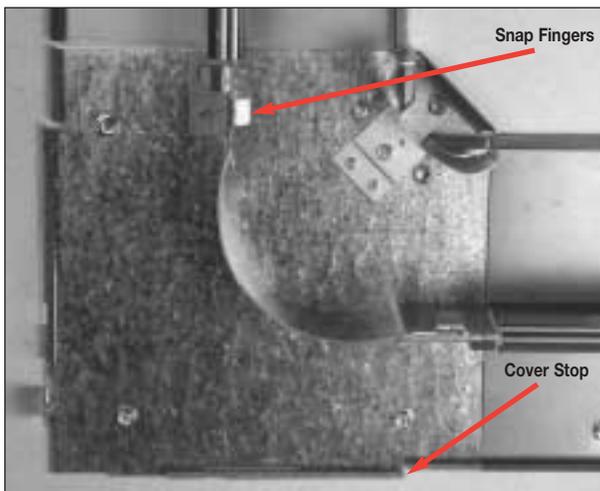


Step 4. Install Raceway Covers as shown. Position raceway cover section against cover stop and snap into place.

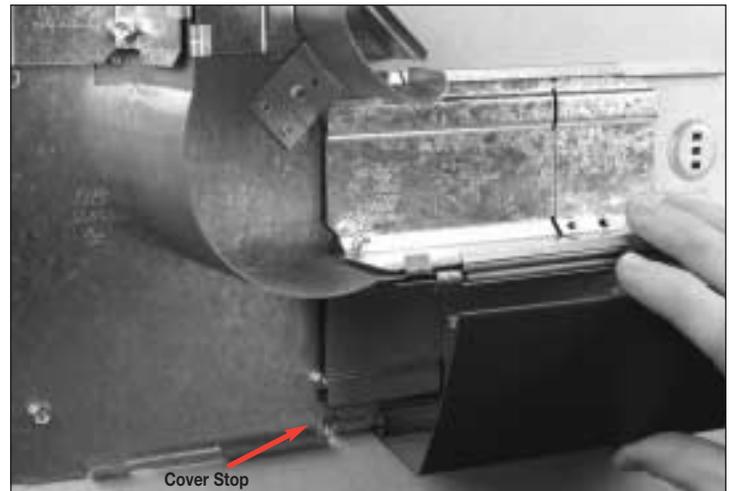


For more information, visit www.wiremold.com/ds4000.


Step 5. All Fitting Covers snap into place. Tabs on Fitting Covers align with slots in Fitting Base.

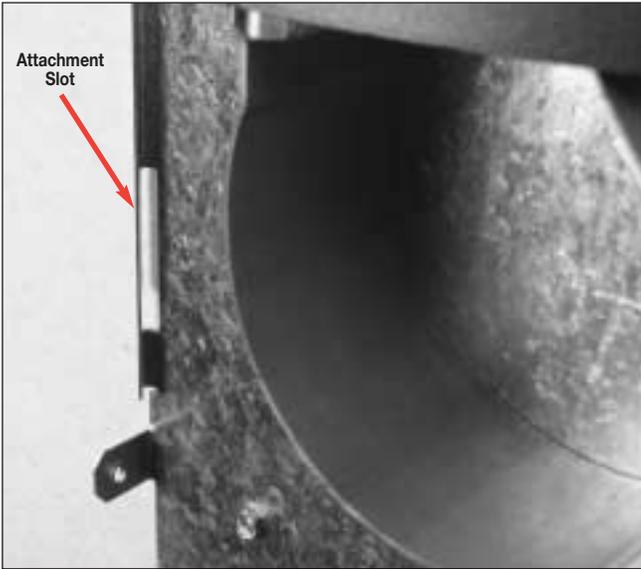

Step 6. To attach DS4011 Cover: Hook the inside corner then rotate down and snap into place. The DS4017 and DS4018 Covers snap straight on. Covers overlap raceway cover by approximately 3/8" [10mm].

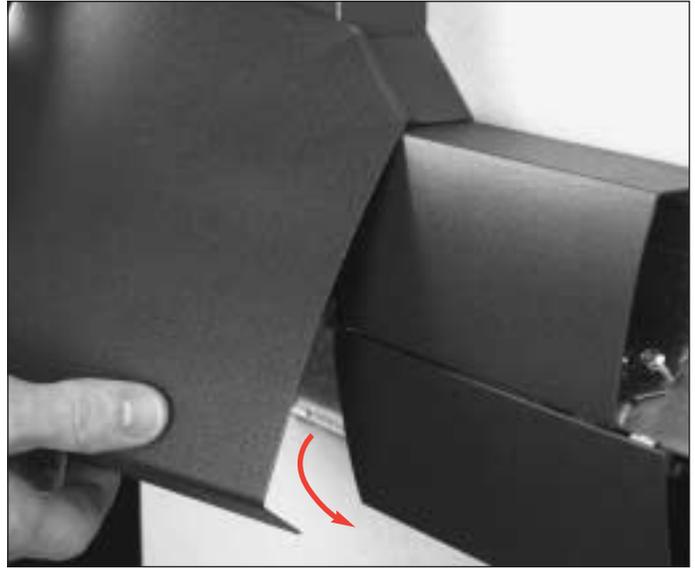

DS4011 Base

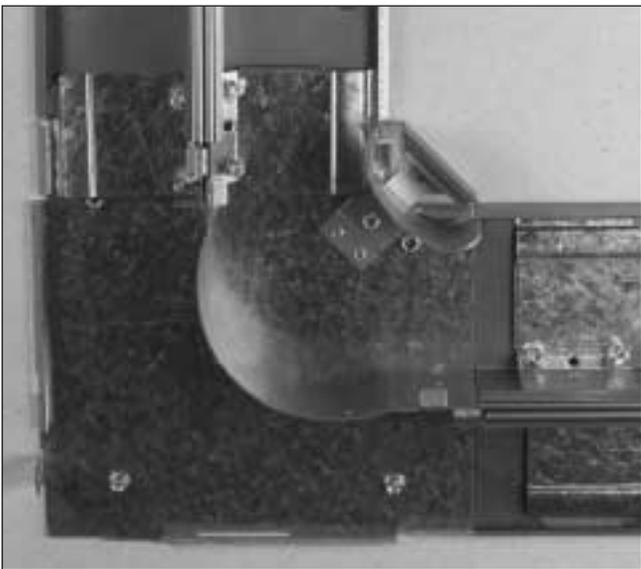


DS4011 with Cover Installed




DS4017 Base




DS4017 with Cover Installed

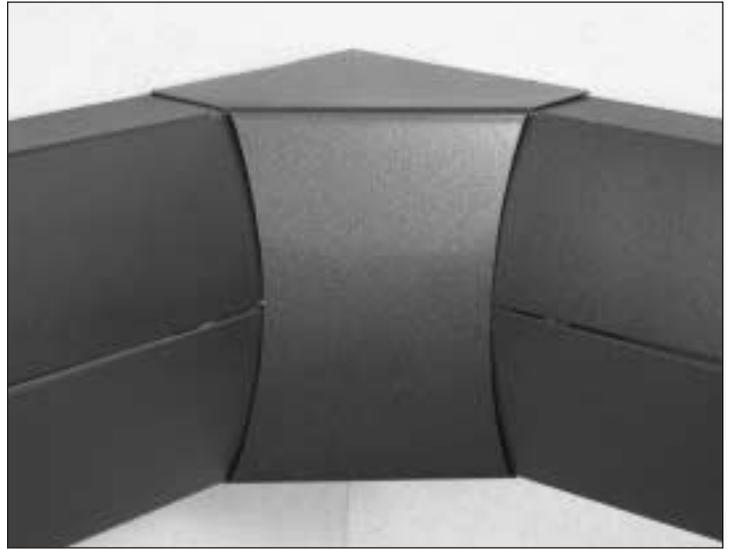

DS4018 Base

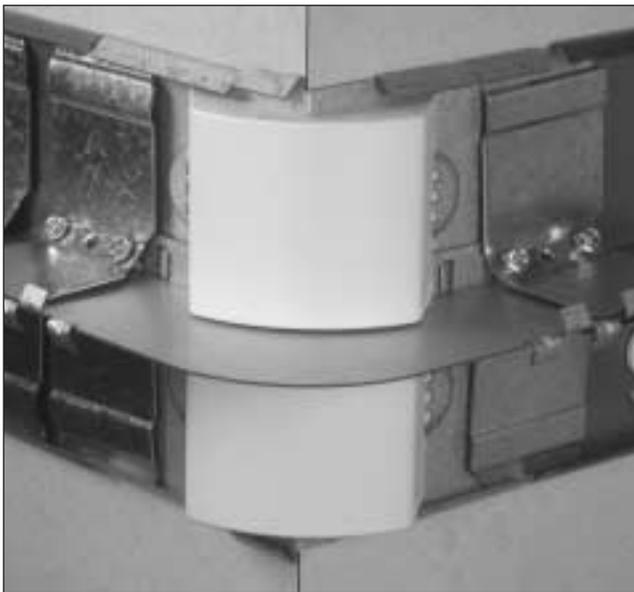


DS4018 with Cover Installed

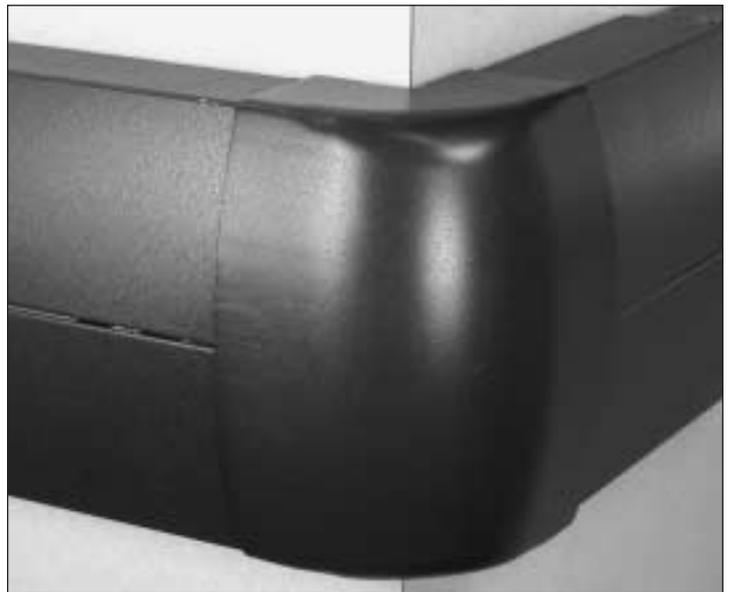

FITTING COVER REMOVAL – Fitting Cover can be removed using two methods:

Cover Removal with 650RT

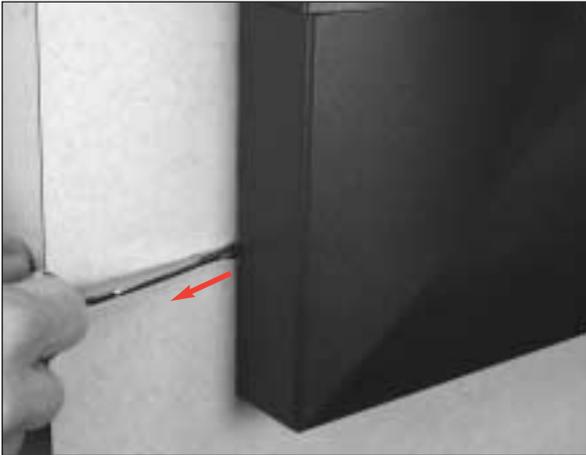


Cover Removal with Screwdriver




To make the Fittings fully tamper resistant, use part no. DSTRK.

Step 1. Locate Dimple on Fitting and use as guide to drill 3/16" [5mm] hole for Tamper Resistant Screw.

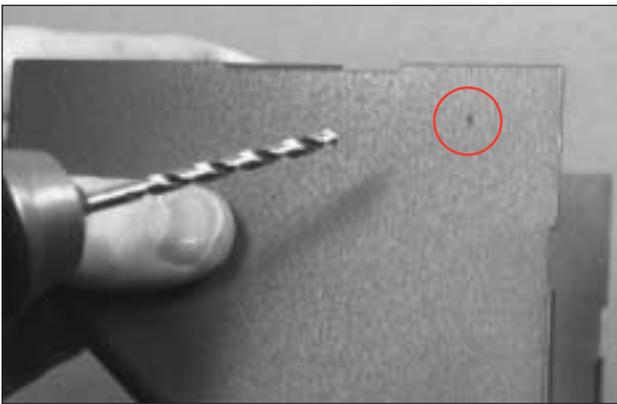

Step 2. Install Tamper Resistant Screw through drilled hole in the Cover into the tab with hole on the Fitting Base.

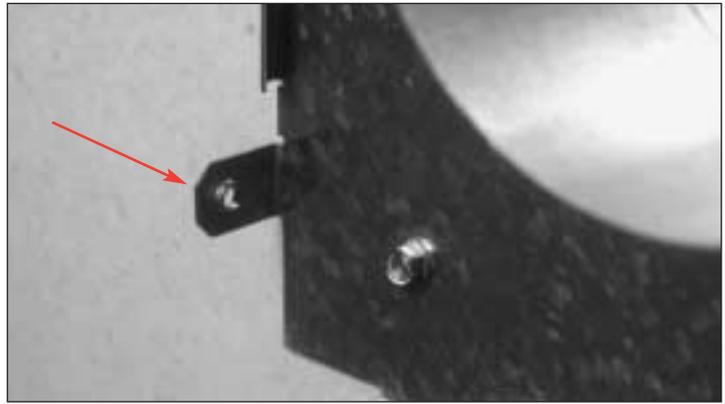

Step 3. Installation complete.



For more information, visit www.wiremold.com/ds4000.

WIREMOLD



Wiremold / Legrand

U.S. and International:

60 Woodlawn Street • West Hartford, CT 06110

1-800-621-0049 • FAX 860-232-2062 • Outside U.S. 860-233-6251

Canada:

570 Applewood Crescent • Vaughan, Ontario L4K 4B4

1-800-723-5175 • FAX 905-738-9721

