



Mounting Instructions for: VPW100-G, VPW200-G, VPP100-G, VPP200-G, VPC100-G, VPC200-G

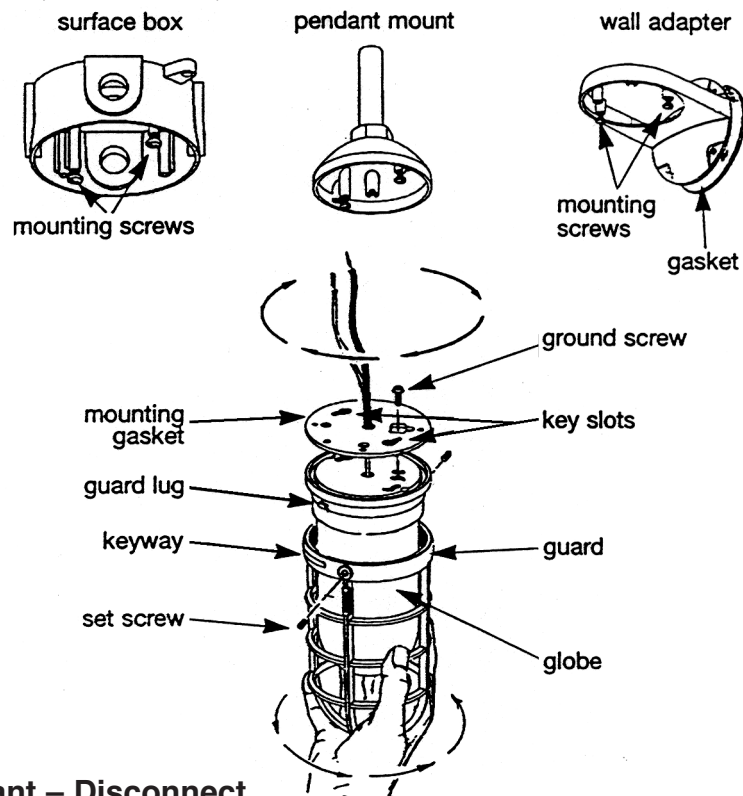

Important – Disconnect power before installing

1. Install desired mounting fitting, i.e., surface box, pendant or wall adapter.
2. Install (supplied) mounting screws to desired fitting a few turns.
3. Slip mounting gasket over socket adapter leads and line up mounting key slots. Insure that ground screw opening lines up with grounding pads.
4. Connect supply leads to socket leads per NEC. Connect supply ground wire to grounding pads with screw supplied.
5. Twist socket adapter up over mounting screws. Tighten mounting screws.
6. Install lamp and globe.
7. Slip guard (optional) up and over globe, lining up keyways in guard with guard lugs on socket adapter. Turn clockwise until tight. Install set screws and tighten.

Installation Instructions for Replacement Guards: VG-100, VG-200

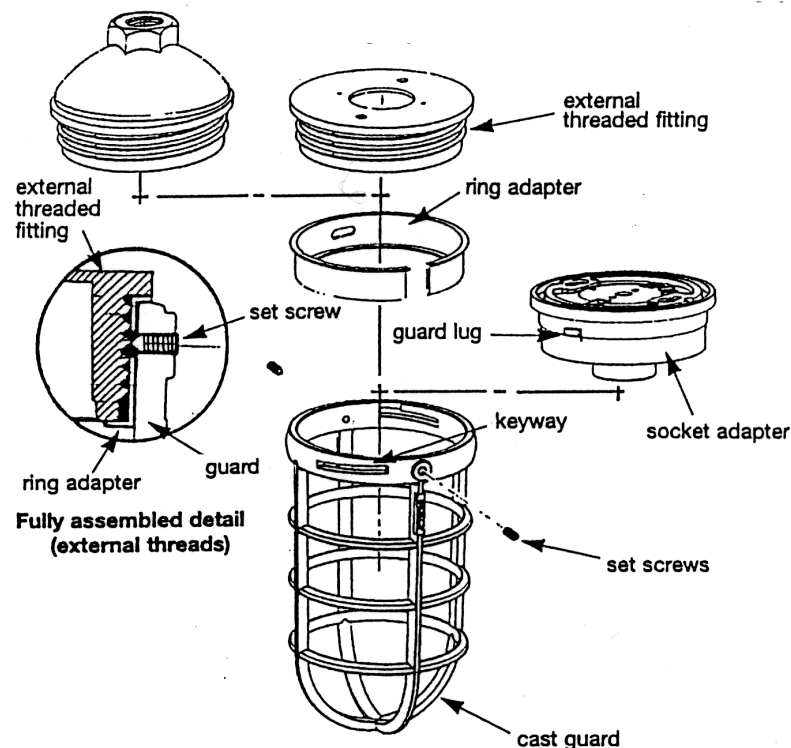

Installing replacement guards onto fittings with external threads

1. To install cast guard onto vaportight fittings with external threads, first squeeze ring adapter into guard as shown. Be sure to align slots in ring with set screw holes in cast guard. Gently tap ring into guard until the ring flange is flush with guard.
2. Partially install set screws into holes in guard.
3. Slide guard/ring assembly over threads of existing fitting until it stops.
4. Tighten set screws to secure guard in place (as shown in detail).

Installing replacement guards onto socket adapters with guard lugs

1. Discard ring adapter.
2. Slip guard up and over globe, lining up keyways in guard with guard lugs on socket adapter. Turn clockwise until tight. Install set screws and tighten.