



Wiremold

WCR/WDR Grommet INSTALLATION INSTRUCTIONS

Installation Instruction No.: 1 000 674R1 – Updated March 2010

Wiremold electrical systems conform to and should be properly grounded in compliance with requirements of the current National Electrical Code or codes administered by local authorities.

All electrical products may present a possible shock or fire hazard if improperly installed or used. Wiremold electrical products may bear the mark as UL Listed and/or Classified and should be installed in conformance with current local and/or the National Electrical Code.

IMPORTANT: Please read all instructions before beginning.

1. Slide the two tabs on one side of the grommet into place below the edge of the opening.
2. Squeeze the second side to allow the tabs to snap into place below the other edge of the opening.

NOTES:

1. Grommet must be in place before installation of telecommunication cables.
2. Not intended to provide the required bend radius for telecommunication cables.
3. Not for use with power applications.

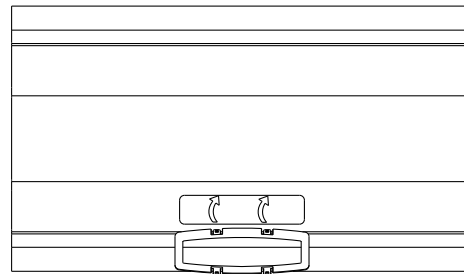


Figure 1

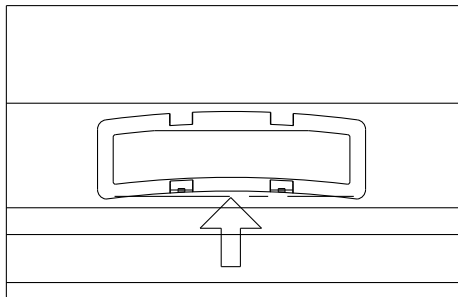


Figure 2

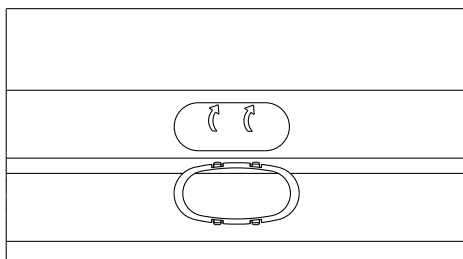


Figure 4

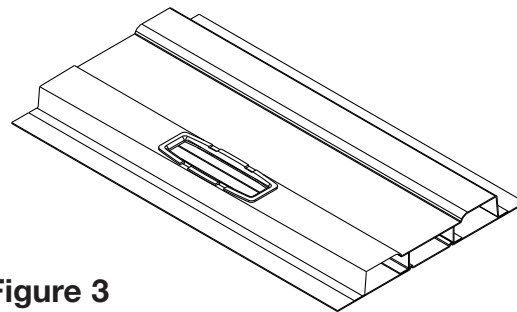


Figure 3

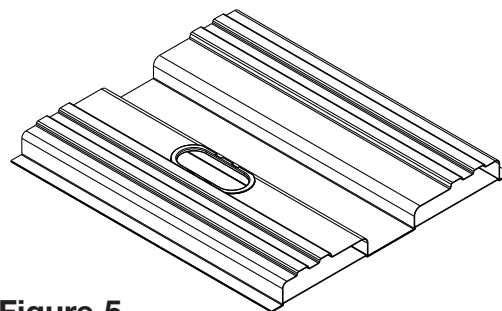


Figure 5



Wiremold

Wiremold

U.S. and International:

60 Woodlawn Street • West Hartford, CT 06110

1-800-621-0049 • FAX 860-232-2062 • Outside U.S.: 860-233-6251

Canada:

570 Applewood Crescent • Vaughan, Ontario L4K 4B4

1-800-723-5175 • FAX 905-738-9721

