



# WallSource™ New Construction Box

## INSTALLATION INSTRUCTIONS


### In Stud Construction

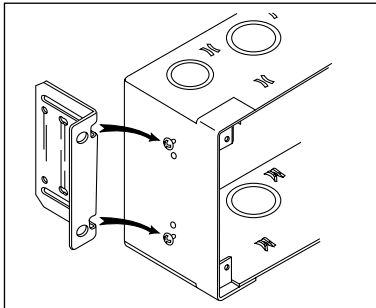


**1.** Install mounting brackets, included with WSA42-4.

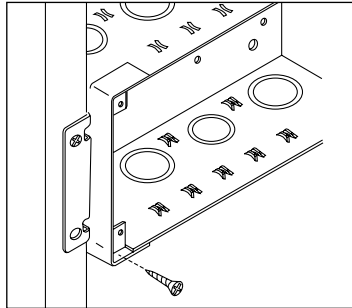


**2.** Attach to stud.

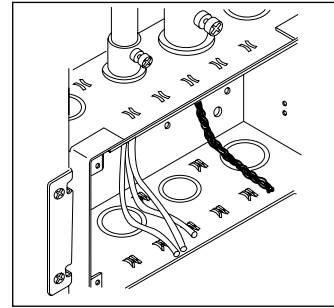


**3.** Pull wire and cable.

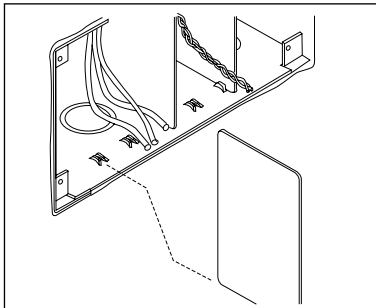


**4.** Install divider(s).

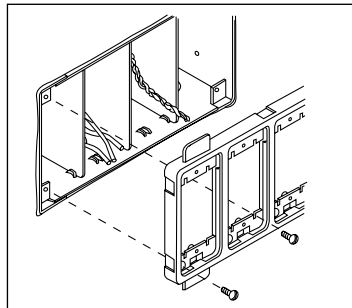

**5.** Install self-levelling WSA07-4 device mounting bracket.

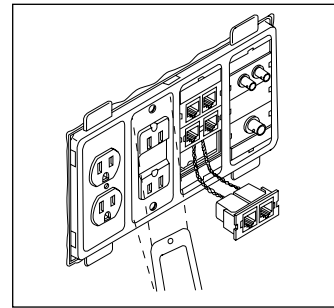


**6.** Mount devices.

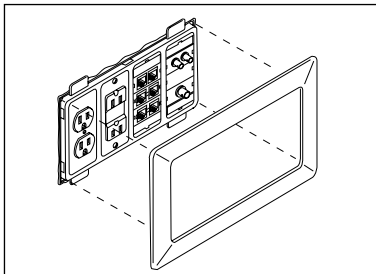


**7.** Snap on trim ring, included with WSA07-4.

### For Retrofit Applications in Stud Construction:

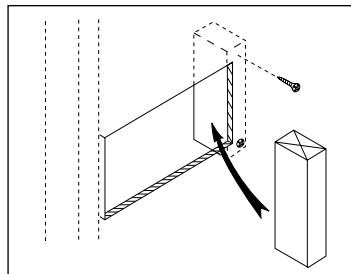

**1.** Cut opening in wall.  
Install WSA42-4.

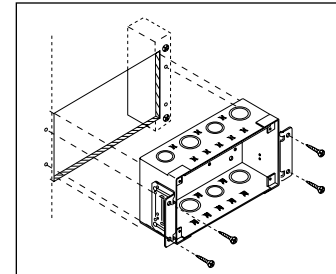

**2.** Attach brackets to studs.  
Continue with Step 3.