Cablofil Wire Mesh Cable Tray Accessories

Fastrut Connector

FS41

Hook one side of the FS41 into channel support.

Depress FS41 and hook other side into channel support.

Add an additional FS41 on the opposite side of the channel support for secure installation.

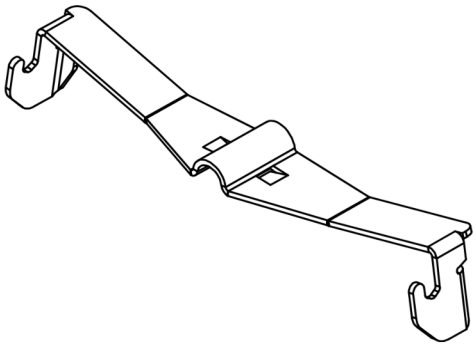

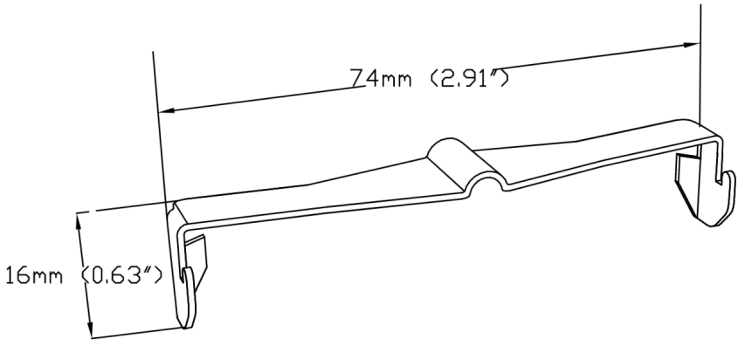

	PKG. QTY.	WEIGHT		FINISH / AVAILABILITY			ORDER EXAMPLE
		LBS	KG	DC	316L	BL	
FS 41	50	3.3	1.5	S	S	S	FS 41DC

S - NORMALLY STOCKED M - MADE TO ORDER

INSTALLATION VIDEO

Notes:

- Use 2 clips with 4" - 12" wide tray.
- Use 3 clips with tray wider than 12".
- FASTRUT attaches tray to strut without bolts, nuts, or tools.
- Install FASTRUT on outer wires of tray, and both sides of the strut.
- Solid in packages of 50.

"Copyright LNCA, Inc. Drawings are proprietary and may not be copied or otherwise duplicated or used without express written permission."

CABCS0431.C

Legrand/Cablofil
8319 State Rt. 4
Mascoutah, IL 62258 USA
800-658-4641
Fax618-566-4978
www.legrand.us/cablofil