ORTRONICS® 125 EUGENE O'NEILL DRIVE
NEW LONDON, CT 06320
TEL: 860-445-3800
FAX: 860-405-2990

TITLE
# OR-71601420
## CLARITY SHIELDED TRACJACK INSTRUCTION SHEET

'THIS DEVICE IS INTENDED FOR INDOOR USE ON CUMMUNICATION LOOP CIRCUITS WHICH HAVE BEEN ISOLATED FROM THE PUBLIC SWITCHED TELEPHONE NETWORK'

CAUTION: TERMINATE SHIELDED TRACKJACKS PER SPECIFIED WIRING SYSTEM 'T568A' OR 'T568B'

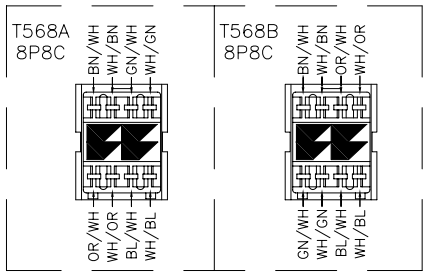


SHIELDED TRACJACK MODULES ARE RECOMMENDED FOR STATION LOCATIONS AND PATCH PANELS.






RECOMMENDED STRIPPER TOOL
OR-60300032 (TOOL)

TRACKJACK PUNCH BUDDY REQUIRED
OR-60300061 (TOOL)
(INCLUDED)

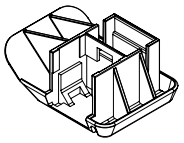

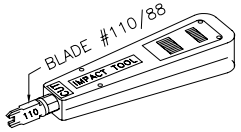


110 TERMINATION TOOL REQUIRED
OR-60300005 (TOOL)
OR-60300006 (BLADE)

FIGURE 1

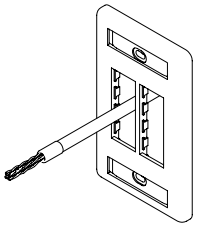

IMPORTANT!

FOR FRONT MOUNT TRACJACK INSTALLATIONS: PASS CABLE THROUGH OPENING IN FACE PLATE OR PANEL AND PROCEED WITH TERMINATION. SEE FIGURE 1

FIGURE 3

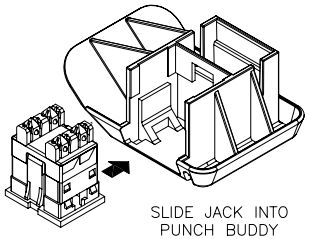

SLIDE JACK INTO PUNCH BUDDY

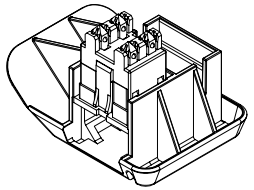

FIGURE 2a – SSTP/SFTP

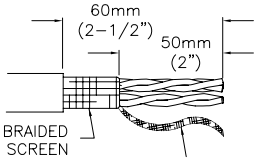


FORM PIG TAIL FROM SCREEN AND DRAIN (SFTP). REMOVE AND TRIM FOIL FROM CONDUCTORS. SPREAD PAIRS AND TRIM SPLINE.

FIGURE 2b-1 – ScTP/FTP

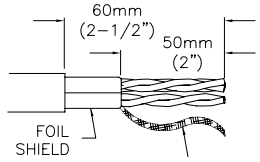


REMOVE 2" OF CABLE JACKET AND FOIL, THEN LIGHTLY SCORE CABLE TO REMOVE 1/2" JACKET ONLY. FOR EASE OF FOLDING FOIL BACK, CUT FOIL OPPOSITE THE OVERLAP TO FORM 2 HALVES OF FOIL. CAREFULLY FOLD BACK FOIL SHIELD ONTO JACKET. TRIM ACETATE AND SPLINE.

CABLE PREPARATION

FIGURE 2b-2 – ScTP/FTP

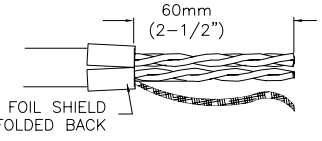




ORTRONICS® 125 EUGENE O'NEILL DRIVE
NEW LONDON, CT 06320
TEL: 860-445-3800
FAX: 860-405-2990

TITLE
OR-71601420
CLARITY SHIELDED TRACJACK INSTRUCTION SHEET

FIGURE 4a – SSTP/SFTP

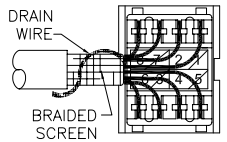


FIGURE 4b – ScTP/FTP

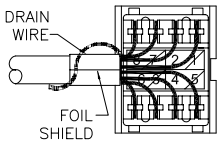


LACE CONDUCTORS
NOTE: MAINTAIN PAIR TWIST
(SHOWN UN-TWISTED FOR CLARITY)

FIGURE 5

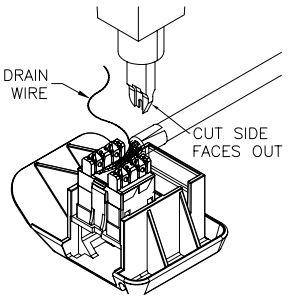


TERMINATE AND TRIM CONDUCTORS
(ScTP/FTP SHOWN)

FIGURE 6a – SSTP/SFTP

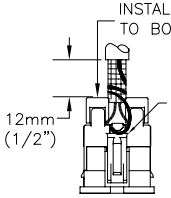


FIGURE 6b – ScTP/FTP

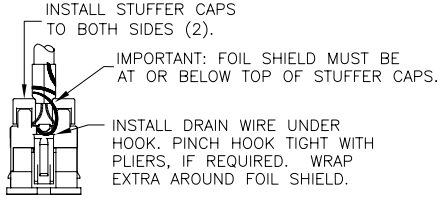


DRAIN WIRE & JACKET POSITIONING

FIGURE 7
INSTALL SHIELDED CAN
(ScTP/FTP SHOWN)

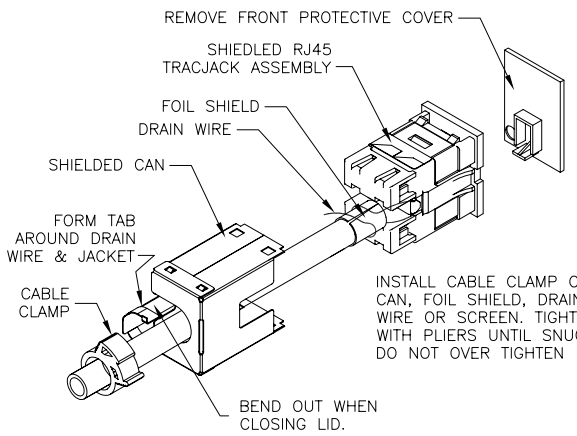


FIGURE 8
INSTALL CABLE CLAMP

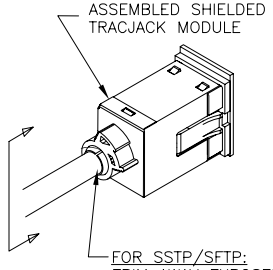

IMPORTANT: NOTE ORIENTATION OF CABLE CLAMP.


| INSTRUCTION SHEET # | REV. | ECN # | SHEET | DWN.BY: | DATE | CHK.BY: | DATE | APP.BY: | DATE |
|---|---|---|---|---|---|---|---|---|---|
| OR-71601420 | 05 | 03684 | 1 of 2 | LEVESQUE | 02/25/08 | C.COLLELO | 03/03/08 | M.MARTICH | 03/03/08 |

ORTRONICS® 125 EUGENE O'NEILL DRIVE NEW LONDON, CT 06320 TEL: 860-445-3800 FAX: 860-405-2990

TITLE
# OR-71601420
## CLARITY SHIELDED TRACJACK INSTRUCTION SHEET

"Le présent dispositif est destiné à une utilisation en intérieur sur un circuit de communication qui a été isolé du réseau téléphonique commuté public "

ATTENTION: RACCORDER LES MODULES TRACJACK BLINDES CONFORMEMENT AU SCHEMA DE CABLAGE SPECIFIE "T568A" ou "T568B".

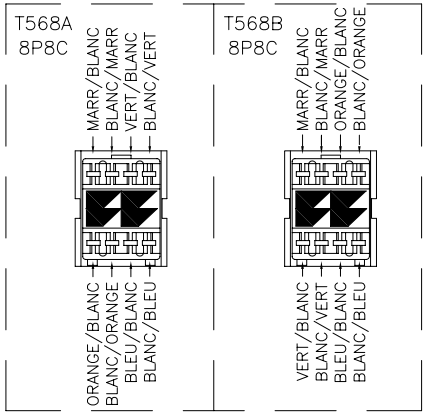


LES MODULES TRACJACK BLINDES sont recommandés pour une implantation aux postes de travail et dans les panneaux de brassage blindés (OR-PHDTJS24).






OUTIL A DENUDEROR
60300032
RECOMMANDE

"PUNCH BUDDY"
(OUTIL D'AIDE AU CABLAGE)
REQUIS
OR-60300061
(INCLUS)

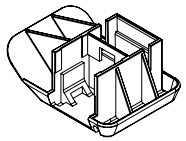

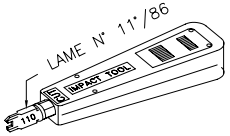


OUTIL DE RACCORDEMENT
110 REQUIS
OR-60300005 (OUTIL)
OR-60300006 (LAME)

FIGURE 1

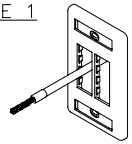

IMPORTANT !

POUR LES INSTALLATIONS TRACJACK PAR L'AVANT : Faire passer le câble à travers l'ouverture du plastron ou du panneau, et effectuer le raccordement en façade. Voir figure à gauche.

FIGURE 3

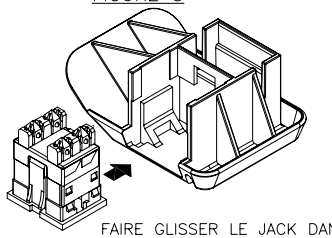

FAIRE GLISSER LE JACK DANS LE « PUNCH BUDDY »

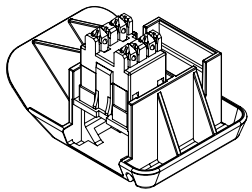

FIGURE 2a – SSTP/SFTP

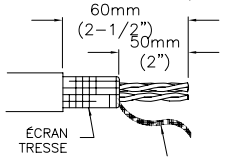


FORMER UNE TRESSE A PARTIR DE L'ECRAN ET DU DRAIN (SFTP) RETIRER ET COUPER LE FILM PLASTIQUE DES CONDUCTEURS

FIGURE 2b-1 – ScTP/FTP

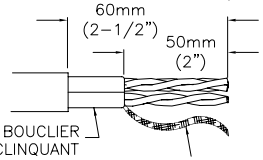


ENLEVEZ 2" DE LA VESTE DE CÂBLE ET BOUCLIER DE CLINQUANT. LÉGÈREMENT COUPE POUR ENLEVER LA VESTE 1/2" SEULEMENT. COUPEZ LE CLINQUANT POUR FORMER 2 MOITIÉS ET RABATTRE SOIGNEUSEMENT. COUPEZ LE FILM PLASTIQUE ET LE SEPARATEUR DE PAIRES

PREPARATION DU CABLE

FIGURE 2b-2 – ScTP/FTP

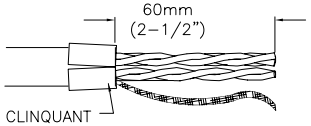


| INSTRUCTION SHEET # | REV. | ECN # | SHEET | DWN.BY: | DATE | CHK.BY: | DATE | APP.BY: | DATE |
|---|---|---|---|---|---|---|---|---|---|
| OR-71601420 | 05 | 03684 | 2 of 2 | LEVESQUE | 02/25/08 | COLLELO | 03/03/08 | M.MARTICH | 03/03/08 |

ORTRONICS® 125 EUGENE O'NEILL DRIVE NEW LONDON, CT 06320 TEL: 860-445-3800 FAX: 860-405-2990

TITLE
OR-71601420
CLARITY SHIELDED TRACJACK INSTRUCTION SHEET

FIGURE 4a – SSTP/SFTP

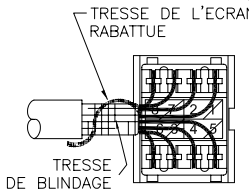


FIGURE 4b-1 – ScTP/FTP

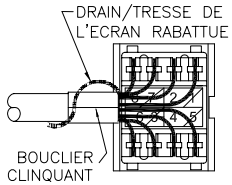


REPARTIR LES CONDUCTORS
NOTE : MAINTENEZ LE TWISTED PAIR, LE (SHOWN DÉTORDUS POUR LA CLARTÉ).

FIGURE 5

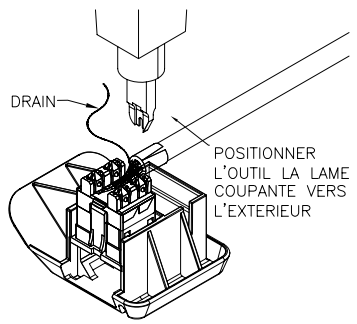


RACCORDER ET COUPER LES CONDUCTEURS
(ScTP/FTP SHOWN)

FIGURE 6a – SSTP/SFTP

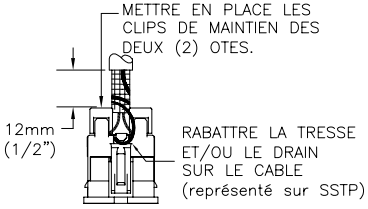


FIGURE 6b – ScTP/FTP

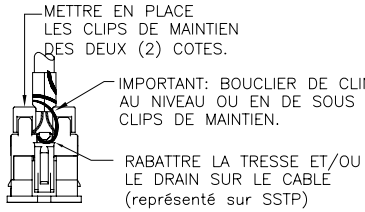


POSITION DU DRAIN ET DE LA GAINE

FIGURE 7
NSTALLATION DU CAPOT DE BLINDAGE
(represente sur ScTP/FTP)

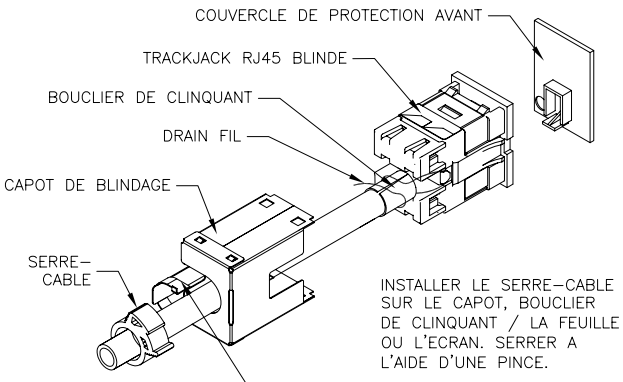


INSTALLER LE SERRE-CABLE SUR LE CAPOT, BOUCLIER DE CLINQUANT / LA FEUILLE OU L'ECRAN. SERRER A L'AIDE D'UNE PINCE.

IMPORTANT: VOIR ORIENTATION DU SERRE-CABLE

FIGURE 8
INSTALLATION DU SERRE-CABLE

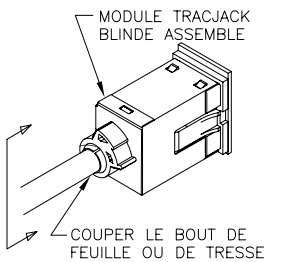


| INSTRUCTION SHEET # | REV. | ECN # | SHEET | DWN.BY: | DATE | CHK.BY: | DATE | APP.BY: | DATE |
|---|---|---|---|---|---|---|---|---|---|
| OR-71601420 | 05 | 03684 | 2 of 2 | LEVESQUE | 02/25/08 | C.COLLELO | 03/03/08 | M.MARTICH | 03/03/08 |