legrand®	WWW.LEGRAND.US	HIGH DENSITY SNAP JACK INSTRUCTION SHEET

HIGH DENSITY SNAP JACK ASSEMBLY

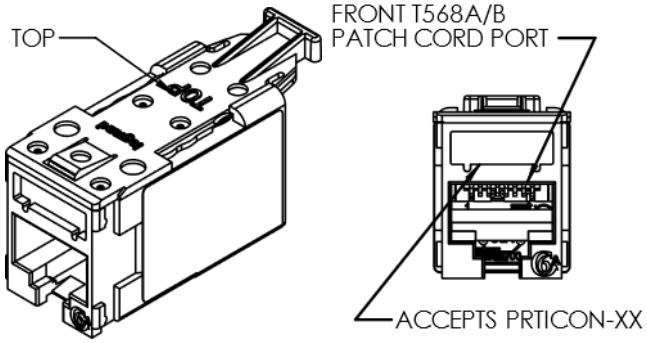

FRONT VIEWS (RJ45 SIDE)
ACCEPTS RJ45 PATCH CORDS
(CAT 6A SHOWN)

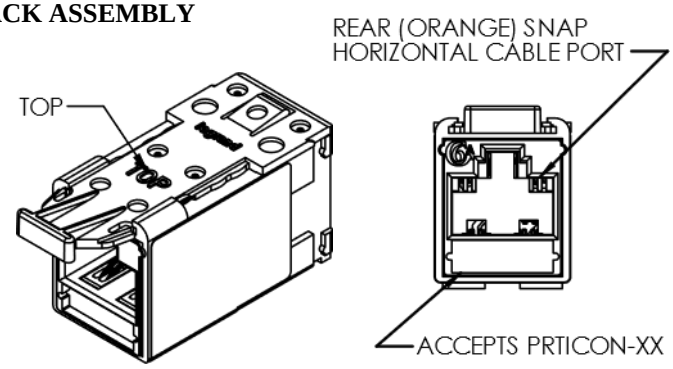

REAR VIEWS (SNAP SIDE)
ACCEPTS SNAP CABLING ASSEMBLY
(CAT 6A SHOWN)

PANEL/FACEPLATE ASSEMBLY

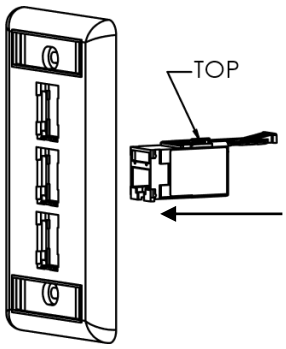

STEP 1:
PULL SLIDE LOCK ALL THE WAY BACK, THEN INSERT SNAP JACK FROM REAR SIDE OF PANEL OR FACEPLATE. (SNAP JACK WILL ONLY GO IN ONE WAY WITH SLIDE LOCK UP)

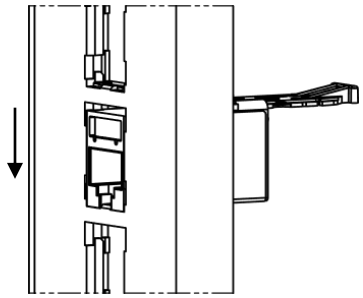

STEP 2:
ONCE SNAP JACK SHOULDERS COME INTO CONTACT WITH BACKSIDE OF PANEL OR FACEPLATE, PRESS SNAP JACK DOWNWARD

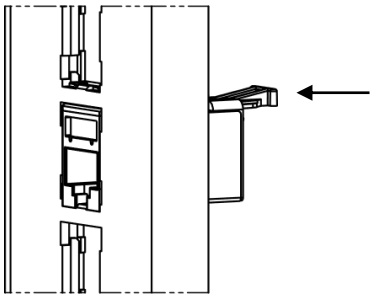

STEP 3:
PUSH SLIDE LOCK FORWARD UNTIL THE FRONT ENGAGES PANEL OR FACEPLATE AND IS FLUSH WITH THE SNAP JACK FACE

HIGH DENSITY SNAP JACK REMOVAL
(STANDARD FOR ALL FACEPLATE AND PANELS)

STEP 1: →
PULL SLIDE LOCK BACK

STEP 2: ↑
LIFT UP SNAP JACK HOUSING

STEP3: →
PULL OUT SNAP JACK HOUSING

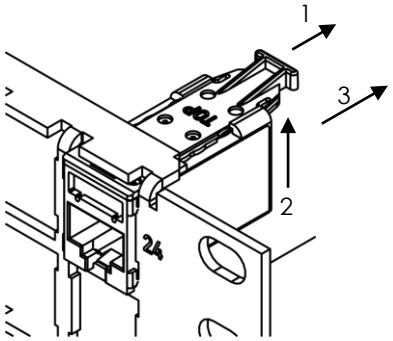

INSTRUCTION SHEET #:	REV.:	ECN #:	ECN DATE:	SHEET	DWN. BY:	DATE:	CHK. BY:	DATE:	APP. BY:	DATE:
71602046	00	-	-	1 of 1	KL	6/1/2024	DP	6/11/2024	KC	6/19/2024