

Wiring Devices

Wiring Information

For use with:

18/2 thru 10/3 AWG Round cord (.28" to .71" Dia.), (.02" to .63" Dia. for Hospital Grade)

- Hard Service Cord (Type S series)
- Junior Hard Service Cord (Type SJ series)
- Vacuum Cleaner Cord (Type SV series)


Wiring Instructions

1. Loosen three screws to remove front section.




2. Insert cord through grip section. Strip insulation and wire to terminal screws.

CAUTION: DO NOT SOLDER DIP CONDUCTORS.

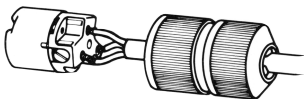

3. Reassemble grip section to front section, tighten three screws.
4. Twist back half of grip section, using a pushing motion, to tighten grip.

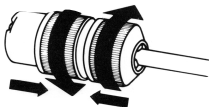

For Wire Replacement

Twist to open the grip. If necessary, remove back and open the clamp. Replace the clamp as shown with legs in slots.

