

**ORTRONICS®**

125 EUGENE O' NEILL DRIVE
NEW LONDON, CT 06320
PHONE: 860-445-3800
FAX: 860-405-2990

TITLE: 6"x 6" CABLE MANAGEMENT
CAGE FOR MIGHTY MO 6

6" x 6" CABLE MANAGEMENT CAGE, MIGHTY MO 6 ASSEMBLY INSTRUCTIONS

STEPS:

1. Before mounting the cable cage, inventory material contents per Sheet 2 of 5 of the instruction sheets.

FIGURE 1 INSTRUCTIONS: Dual rack front mounting.

1. Adjust rack spacing to be 2-1/2" apart. Attach 3 brackets (with hooks pointing up), starting at the bottom and working up using the #10 x 1/2" hex washer screws. Place the last bracket upside down at the top of the cage and place the cage over the attached brackets and secure the top bracket using the #10 x 1/2" hex washer head screws.

FIGURE 2 INSTRUCTIONS: Single rack front mounting.

1. Attach cable cage per Figure 1 (Sheet 3 of 5), using #10 X 1/2" hex washer head screws to rack side only.
2. Insert the square plastic nuts into the side of the rack at each bracket location.
3. Secure end support brackets using #10 x 1/2" hex washer head screws into the nuts.
4. Attach end brackets to cage brackets using #10 x 1/2" hex washer screws.

FIGURE 3 INSTRUCTIONS: Swing latch replacement installation.

1. Installation can be either right or left hand swing outs.
2. Position latch at end of ring and tap into place with a rubber mallet or piece of wood.

FILE: 716\014191.XLS

INSTRUCTION SHEET:	REV:	ECN:	SHT:	BY:	DATE:	CHK. BY:	DATE:	APP. BY:	DATE:
71601419	00		1 OF 5	S. LEVESQUE	03/26/04	D. Bogue	03/26/04	MEM	03/26/04




ORTRONICS®

125 EUGENE O'NEILL DRIVE
NEW LONDON, CT 06320
TEL: 860-445-3800
FAX: 860-405-2990

TITLE 6" X 6" CABLE
MANAGEMENT CAGE FOR
MIGHTY MO 6

TYPICAL ASSEMBLED VIEW

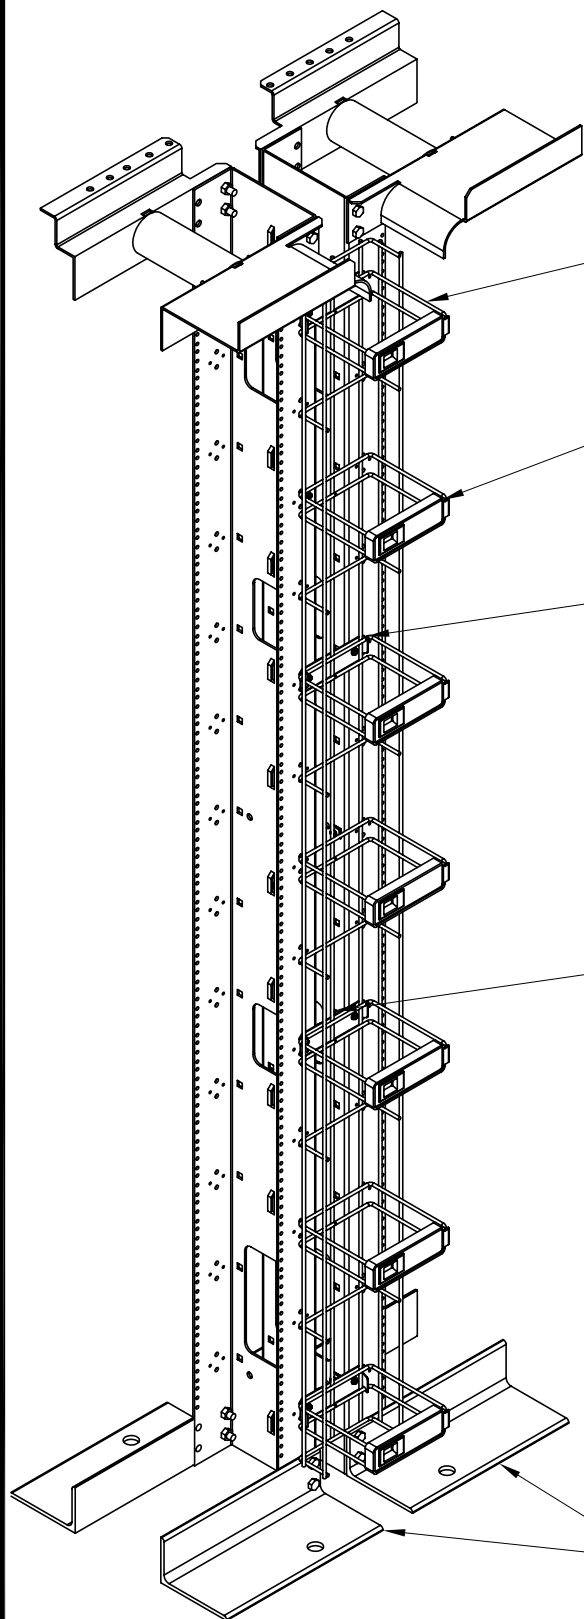

MIGHTY MO 6 VERTICAL CABLE
MANAGEMENT CAGE
(QTY. 1)

LATCH, SWING ASSEMBLY 6" CAGE
(QTY. VARIES PER LENGTH)

BRACKET KIT MNT, 6" CAGE
(QTY. 4)
#10 x 1/2" HEX WASHER SCREW
(QTY. 8)

BRACKET, END SUPPORT KIT, 6" CAGE
(QTY. 4)

MIGHTY MO RACK (NOT INCLUDED)
2 RACKS SHOWN FOR CLARITY ONLY

CAD: 716\014192


INSTRUCTION SHEET #	REV.	ECN #	SHEET	DWN.BY:	DATE	CHK.BY:	DATE	APP.BY:	DATE
OR-71601419	00		2 of 5	LEVESQUE	03/26/04	D. Bogue	03/26/04	MEM	03/26/04



ORTRONICS®

125 EUGENE O'NEILL DRIVE
NEW LONDON, CT 06320
TEL: 860-445-3800
FAX: 860-405-2990

TITLE 6" X 6" CABLE
MANAGEMENT CAGE FOR
MIGHTY MO 6

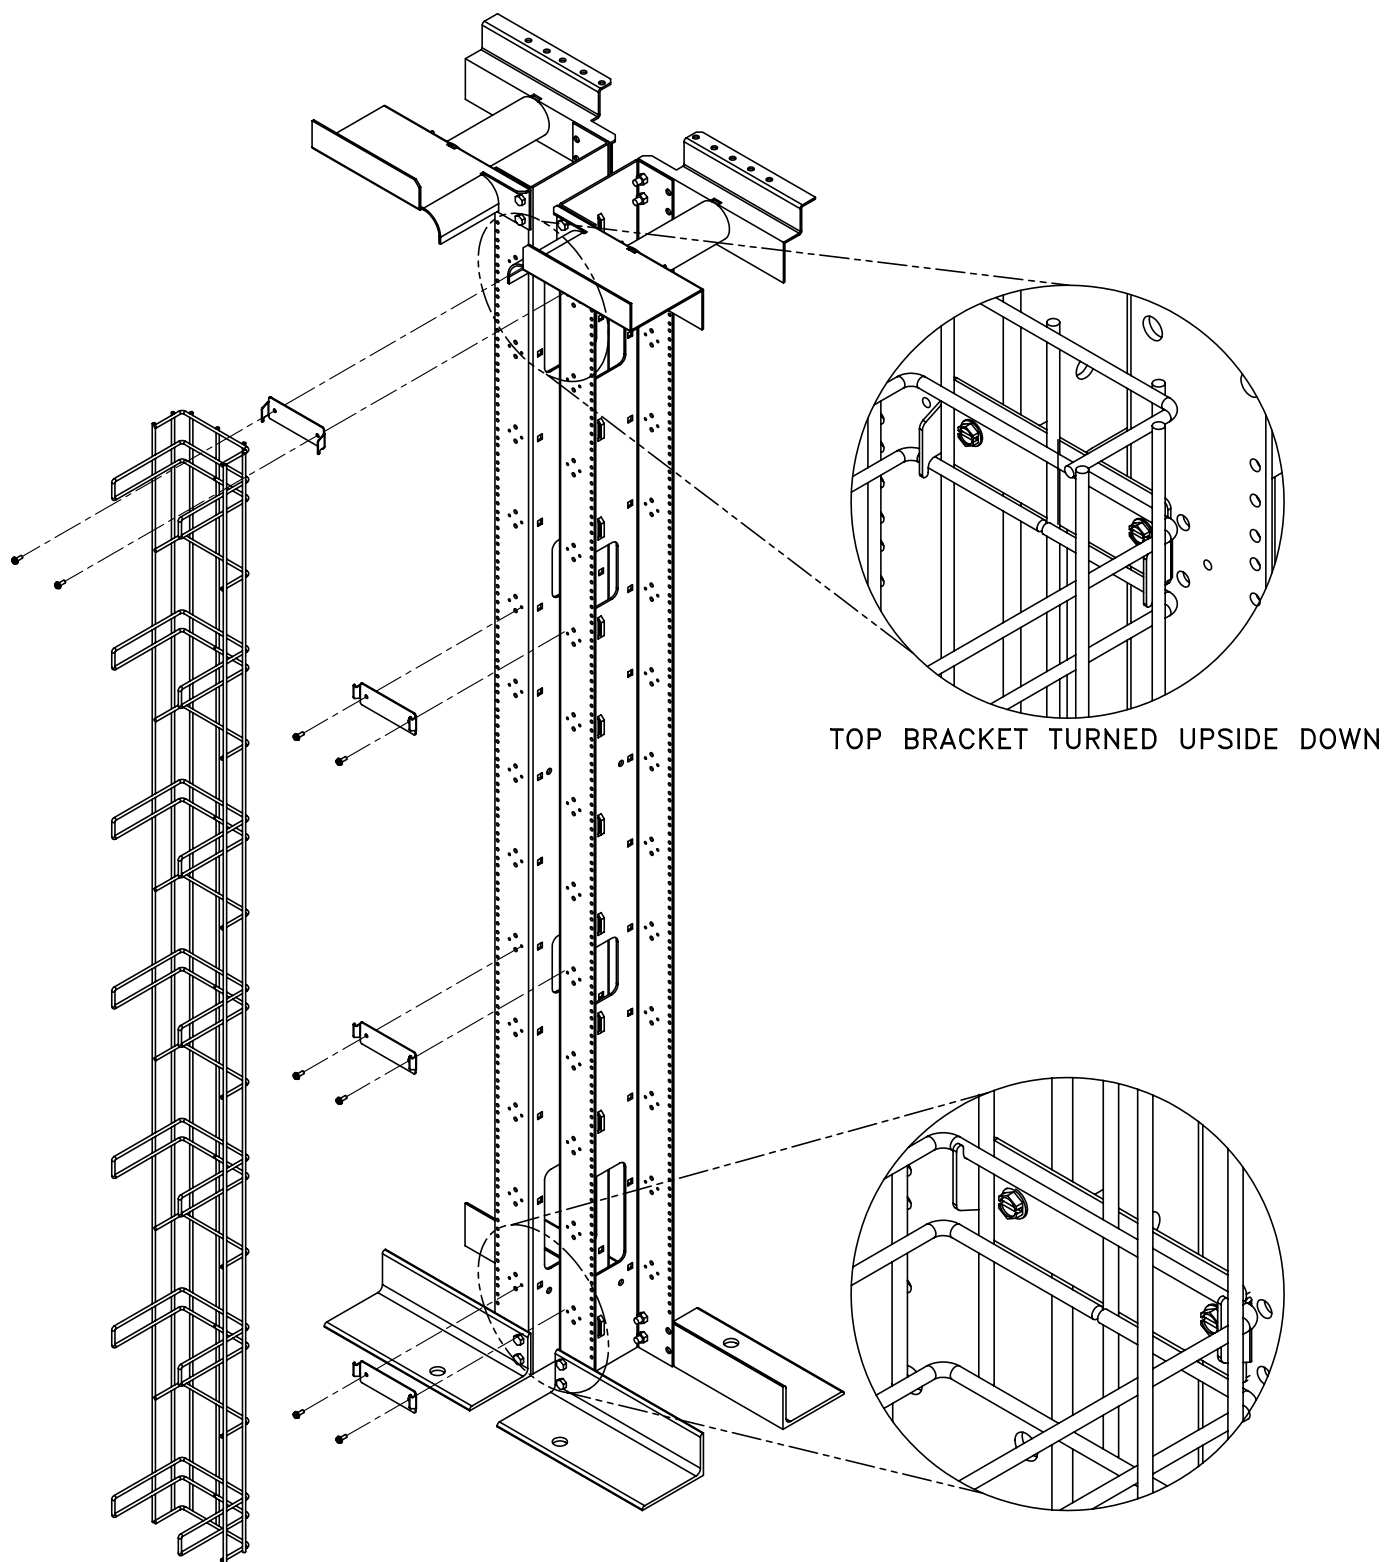

TOP BRACKET TURNED UPSIDE DOWN

FIGURE 1

CAD: 716\014193

INSTRUCTION SHEET #	REV.	ECN #	SHEET	DWN.BY:	DATE	CHK.BY:	DATE	APP.BY:	DATE
OR-71601419	00		3 of 5	LEVESQUE	03/26/04	D. Bogue	03/26/04	MEM	03/26/04



ORTRONICS®

125 EUGENE O'NEILL DRIVE
NEW LONDON, CT 06320
TEL: 860-445-3800
FAX: 860-405-2990

TITLE 6" X 6" CABLE
MANAGEMENT CAGE FOR
MIGHTY MO 6

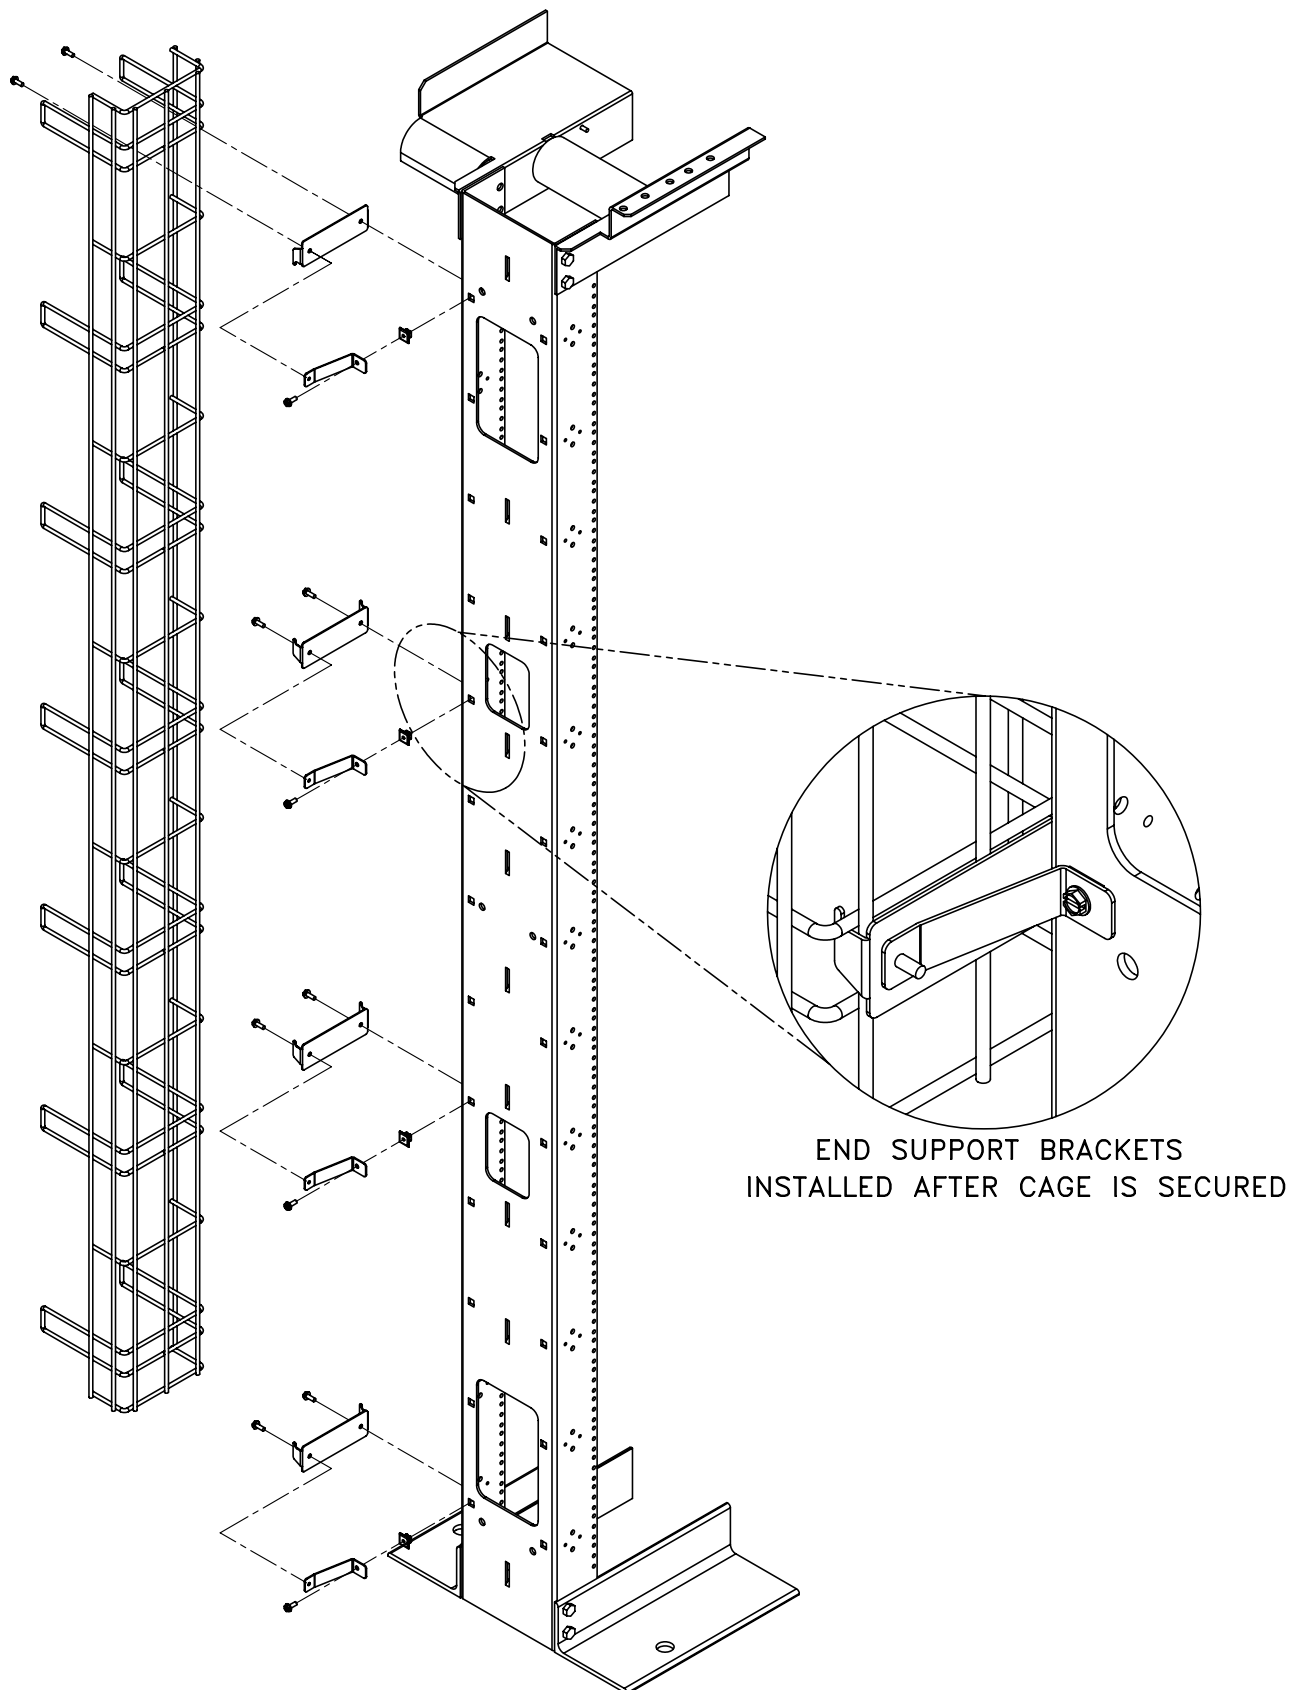


FIGURE 2


CAD: 716\014194

INSTRUCTION SHEET #	REV.	ECN #	SHEET	DWN.BY:	DATE	CHK.BY:	DATE	APP.BY:	DATE
OR-71601419	00		4 of 5	LEVESQUE	03/26/04	D. Bogue	03/26/04	MEM	03/26/04


**ORTRONICS®**

125 EUGENE O'NEILL DRIVE
NEW LONDON, CT 06320
TEL: 860-445-3800
FAX: 860-405-2990

TITLE 6" X 6" CABLE
MANAGEMENT CAGE FOR
MIGHTY MO 6

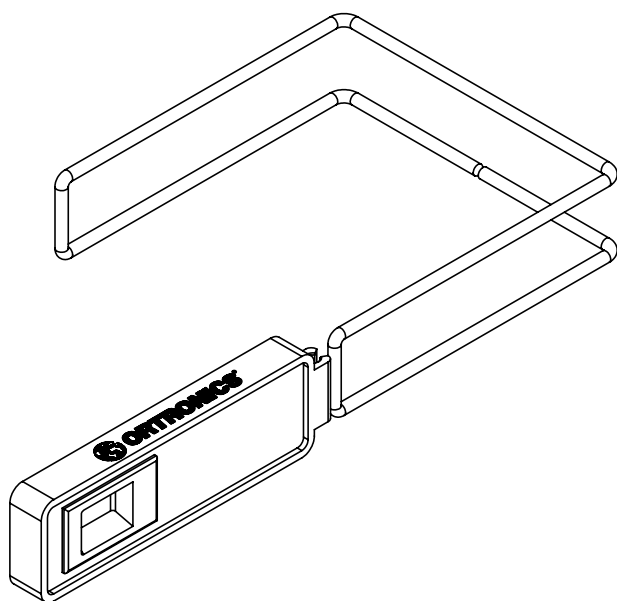

TO REPLACE LATCHES
POSITION LATCH AT END OF
RING AND TAP INTO PLACE
WITH A RUBBER Mallet OR
BLOCK OF WOOD

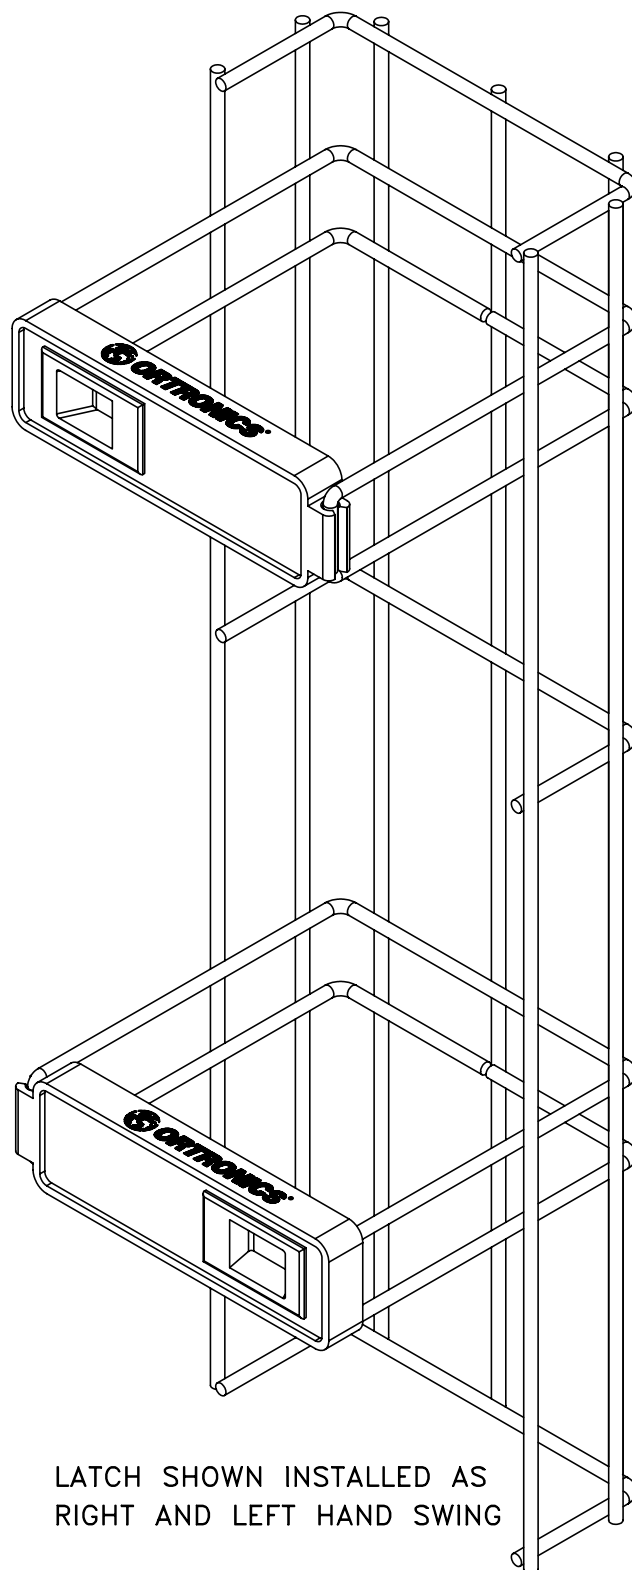

LATCH SHOWN INSTALLED AS
RIGHT AND LEFT HAND SWING

FIGURE 3

CAD: 716\014195

INSTRUCTION SHEET #	REV.	ECN #	SHEET	DWN.BY:	DATE	CHK.BY:	DATE	APP.BY:	DATE
OR-71601419	00		5 of 5	LEVESQUE	03/26/04	D. Bogue	03/26/04	MEM	03/26/04